


BUY ON

[www.cablematic.com](http://www.cablematic.com)

# Quick Installation Manual


## RP410

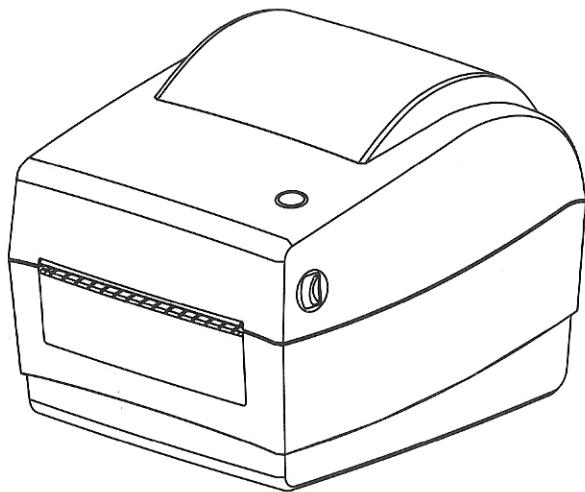


Professional Manufacturer Of Receipt Printer

# Opening-box List


## Standard Accessories

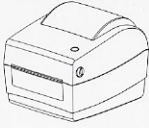

Printer

 


Power cable

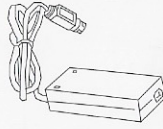

Adapter



 USB Line



Data wire



CD




Quick installation  
guide




warranty card  
Certificate of compliance

## Optional Accessories

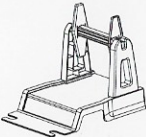


External paper  
support A

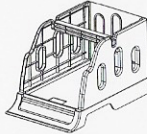


External paper  
support B

# Appearance and Components


## Front View

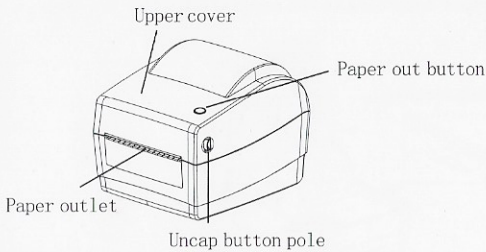


## Rear View

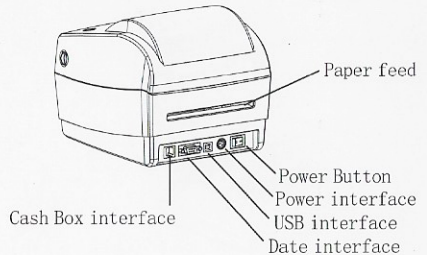

## Inner View

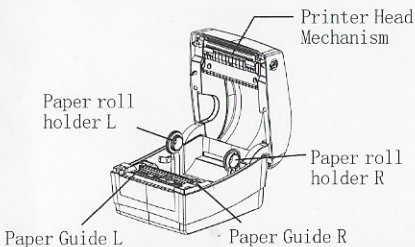


# Cable Connection

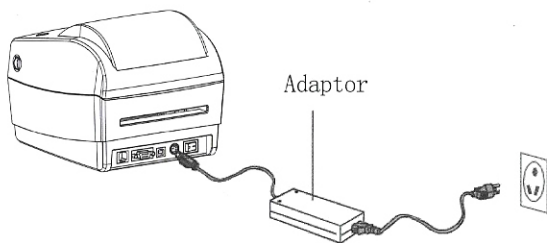

## ■ Power Connection

1. Confirm the printer is Power-off (0);
2. Connect the adaptor to the printer;
3. Connect the adaptor to one end of the power line;
4. Connect the other end of Power line to the socket.

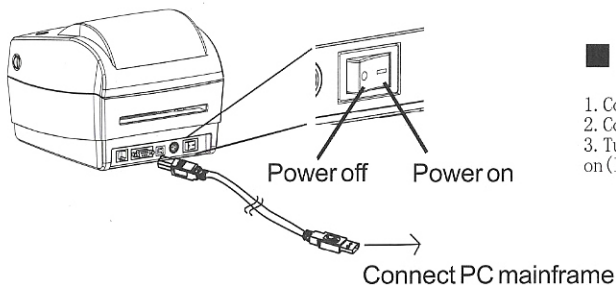


## ■ USB Connection

1. Connect USB to the printer;
2. Connect USB to the PC mainframe;
3. Turn on the printer power to be Power-on (I).


# Consumables Installation

## ■ Inside-scroll Installation


Open fixing seat, put in paper roll with printed face above.

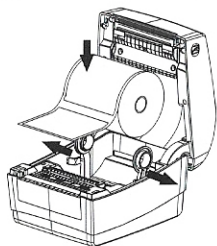

2. Make paper front through paper guide, pull paper exceed rubber roller, adjust paper guide to fix the paper according to the paper width.

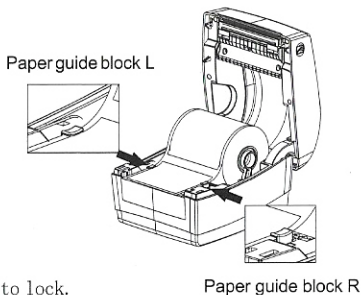


3. Close printer cover, press down to hear "ka" to lock.

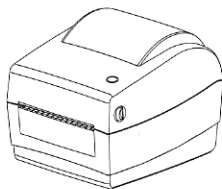


## ■ Outside-scroll Installation


1. Make paper front through paper-feeding slot on the back of printer, confirm the printed face on above.

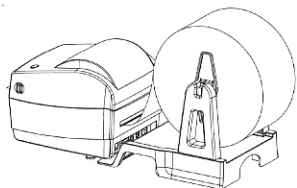


2. Open fixing seat, push up the L seat to lock.

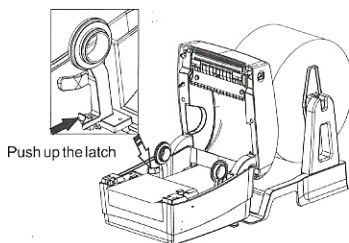

3. Make paper front through paper guide, pull paper exceed rubber roller, adjust paper guide to fix the paper according to the paper width.

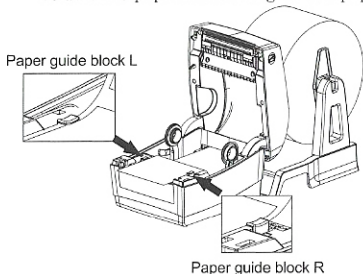

4. Close printer cover, press down to hear "ka" to lock.

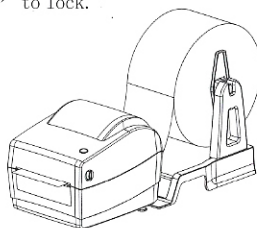

## Indicator Light/Button "FEED" Instruction

### ■ Button 'FEED' Instruction

Printer Status	Operation of FEED	Function
standby	press	Feed in a blank paper automatically
standby	Press(3 seconds)	Enter into the learn mode of cover sheet
Power off	Hold ( release after power on)	Print out self test page
Open the cover	Press 10 seconds	FactoryReset
Continuous printing	press	Print pause
Print pause	press	Resume Printing

### ■ Indicator Light Instruction

Indicator Light Status	Printer Status
Green light shine	Normal standby
Green light slow flashing	Printer working
Blue light shine	RAM Test Errors
Pink light shine	Printer head over heat
Red light shine	The above cover is not covered
Red light flashing	No paper detected
Yellow light shine always	Low input voltage
Yellow light flashing	Paper jam
White light shine always	Print pause