

# User Manual of ND-LC160 Motorized Turntable

Outstanding

intelligent hardware service provider

Thank you for using product. For your own safety please read this user manual carefully before installing it.

## Product Feature

360-Degree rotating display product . Adjustable speed and direction with the push button on turntable housing.



ND-LC160

| Standard configuration |         |
|------------------------|---------|
| Turntable              | 1 piece |
| USB Cable              | 1 piece |





## Specifications



|                    |                             |                   |               |
|--------------------|-----------------------------|-------------------|---------------|
| Material           | Plastic                     | Speed             | 1.7 ~ 6RPM    |
| Color              | White                       | Control           | Manual button |
| Size of            | Φ160mm*H62mm                | Voltage           | DC5V 0.5A     |
| Rotating direction | Anticlockwise/<br>Clockwise | Max load capacity | 2KG           |

- It can be driven by USB power , or it can be driven by 3PCS AA batteries.

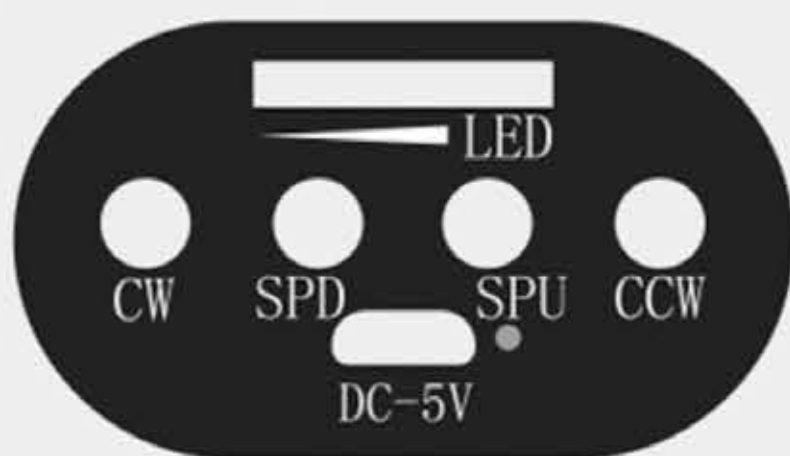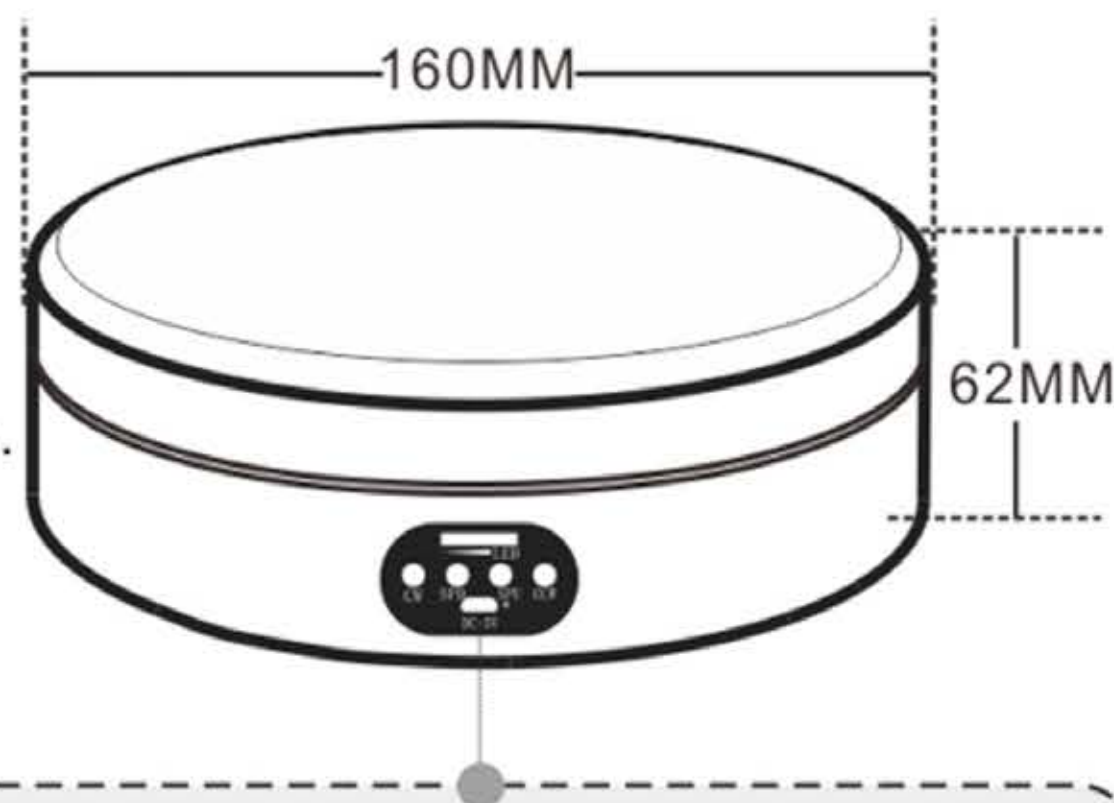

- Push button spec.:  
CW, clockwise/CCW ,counterclockwise;  
SPD, speed down;/SPU ,speed up;  
LED ,Brightness regulating dial wheel.

## Notes

- Damages caused by the disregard of this user manual are not subject to warranty .The dealer will not responsible for any resulting defects or problems.
- 10 ~ 35 seconds per lap (plus or minus 3 seconds tolerance number), with the impact of the load.
- Do not overload on the turntable .The turntable should be placed horizontally and should not be tilted more than 5 degrees.
- The ambient temperature must always be between -5°C to +45°C. Use under indoor dry condition .
- Never touch the device with wet hands, as it could lead to mortal electrical shock or injury.
- Any unauthorized modifications on the device is forbidden due to safety consideration.
- Normal noise value within 55 decibels during product operation.
- Considering longer service life, the product should be suspended around 2 hours in case it has been working fro more than 8 hours continuously.

## Maintenance and repair

- Disconnect from mains before starting maintenance operation.
- We recommend a frequent cleaning of the device. Please use a soft lint-free dry cloth. Never use alcohol or solvents.
- Maintenance should be carried out by qualified professionals only .
- Please use the original packing for transportation in case the turntable need maintenance by manufacturer.
- Should you need any spare parts, please contact us.

## Warranty Card

User's name:

Tel:

Add:

Item No:

Shop's name :

Purchase time:

Maintenance record:

Please keep this card properly

-----  
Patented product , Imitation is prohibited.