



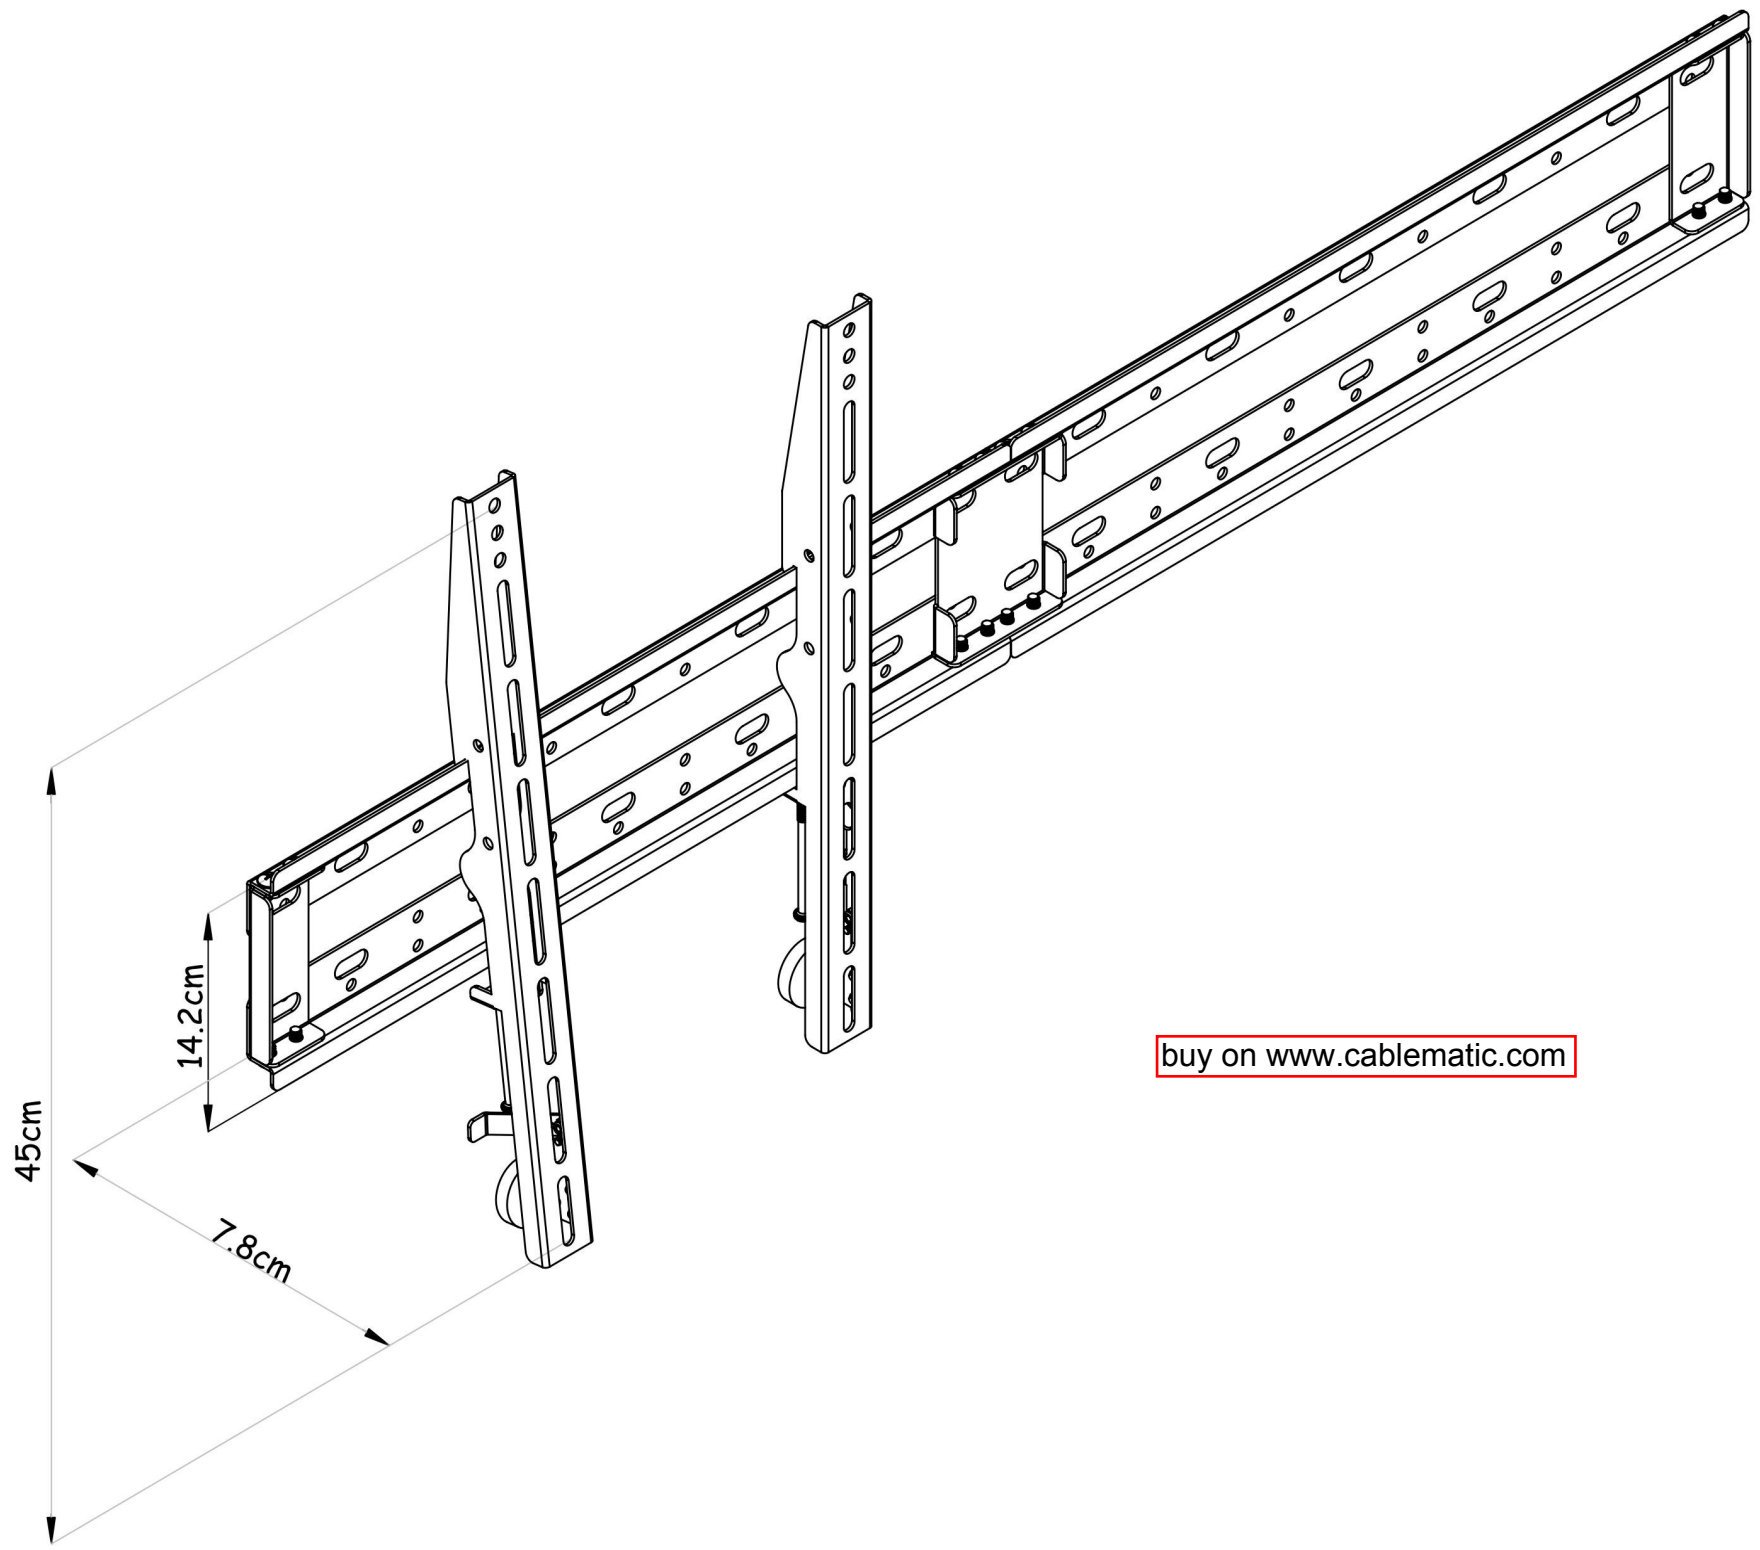

buy on www.cablematic.com

buy on www.cablematic.com

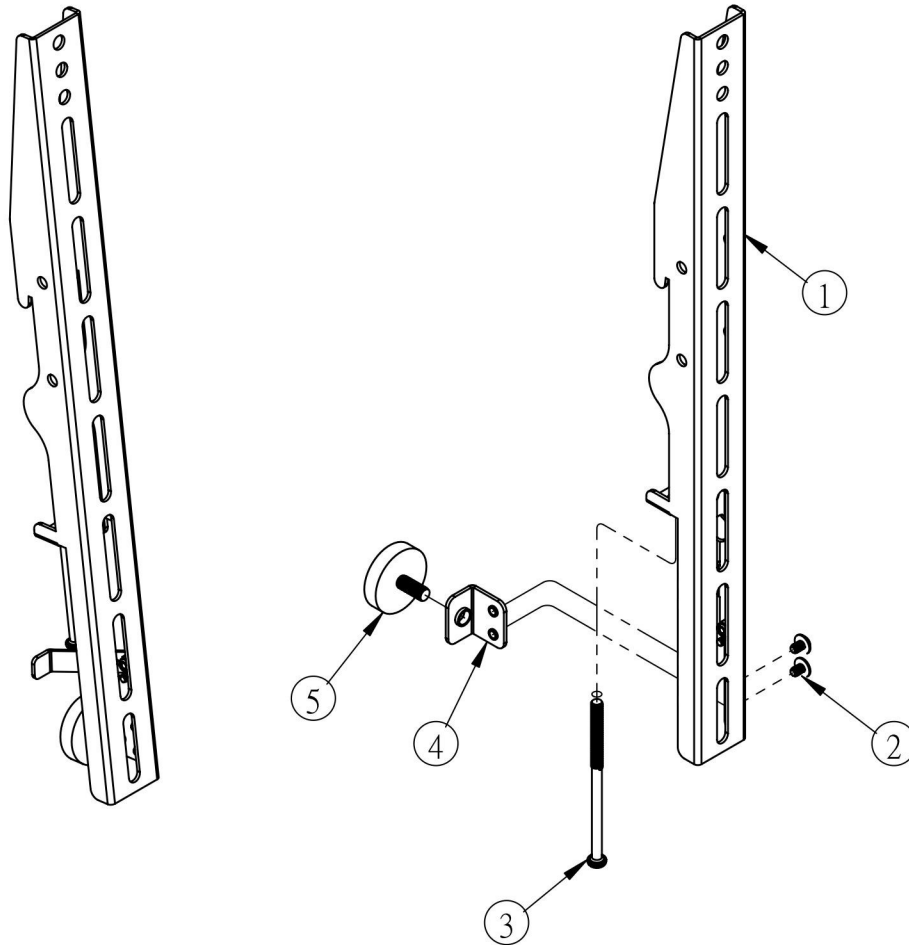

Item	Spare parts	Q'ty
1	FIXED PLATE	2
2	SCREW M5*P0.8*L7mm	4
3	SCREW 1/4"-20UNC*L4"	2
4	L PLATE	2
5	ADJUSTMENT PAD	2
6-1	SCREW M5*L35 FOR PDP	4
6-2	SCREW M6*L35 FOR PDP	4
6-3	SCREW M8*L35 FOR PDP	4
7-1	SCREW M5*L15 FOR LCD	4
7-2	SCREW M6*L15 FOR LCD	4
7-3	SCREW M8*L15 FOR LCD	4
8-1	WASHER $\phi 6 * \phi 16$ FOR PDP	4
8-2	WASHER $\phi 8 * \phi 18$ FOR PDP	4
9-1	SPRING WASHER $\phi 5$ FOR PDP	4
9-2	SPRING WASHER $\phi 6$ FOR PDP	4
9-3	SPRING WASHER $\phi 8$ FOR PDP	4
10	SLEEVE $\phi 8.5 * \phi 15 * L20mm$ FOR PDP	4

